


Spacers



Substation Parallel Spacer Double

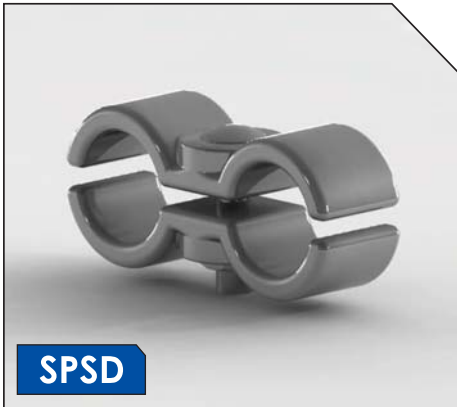

SPSD


Part Number	Conductor Ø (mm)	Conductor Centre Spacing (mm)
SPSD-240-#	24.0	#
SPSD-263-#	26.3	#
SPSD-293-#	29.3	#
SPSD-315-#	31.5	#
SPSD-338-#	33.8	#

PART NUMBER SYSTEM

SPSD Substation Parallel Spacer Double
 293 Conductor Outer diameter
 # Conductor spacing – (070 or 125mm)

Example: SPSP-293-070

Substation Parallel Spacer Triple

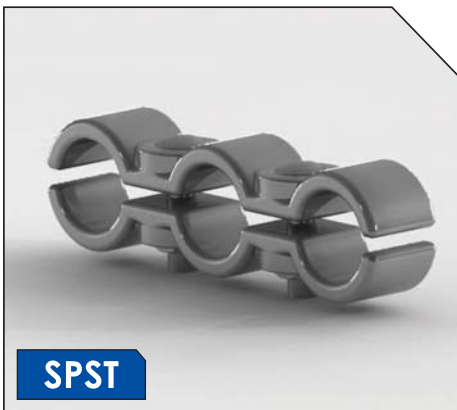

SPST

Part Number	Conductor Ø (mm)	Conductor Centre Spacing (mm)
SPST-293-#	29.3	#
SPST-315-#	31.5	#
SPST-338-#	33.8	#

PART NUMBER SYSTEM

SPST Substation Parallel Spacer Triple
 315 Conductor Outer Diameter
 # Conductor spacing – (070 or 125mm)

Example: SPST-293-070

Substation Parallel Spacer Quad



SPSQ

Part Number	Conductor Ø (mm)	Conductor Centre Spacing (mm)
SPSQ-293-#	29.3	#
SPSQ-315-#	31.5	#
SPSQ-338-#	33.8	#

PART NUMBER SYSTEM

SPSQ Substation Parallel Spacer Quad
 293 Conductor Outer diameter
 # Conductor spacing - (070 or 125mm)

Example: SPSQ-293-070